


DX

SX




DX

SX

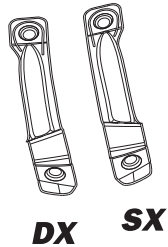


DX


SX

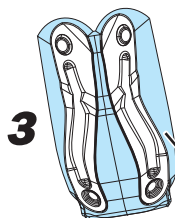

3

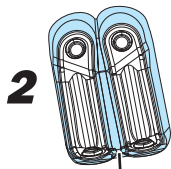

2

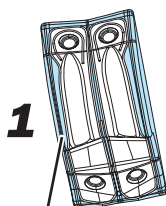



1

Cut around the lines

Installation of body stiffeners for BORA 1/8 onroad bodyshell

BORA

LENSBODIES

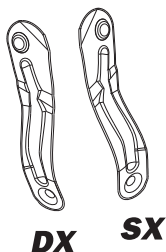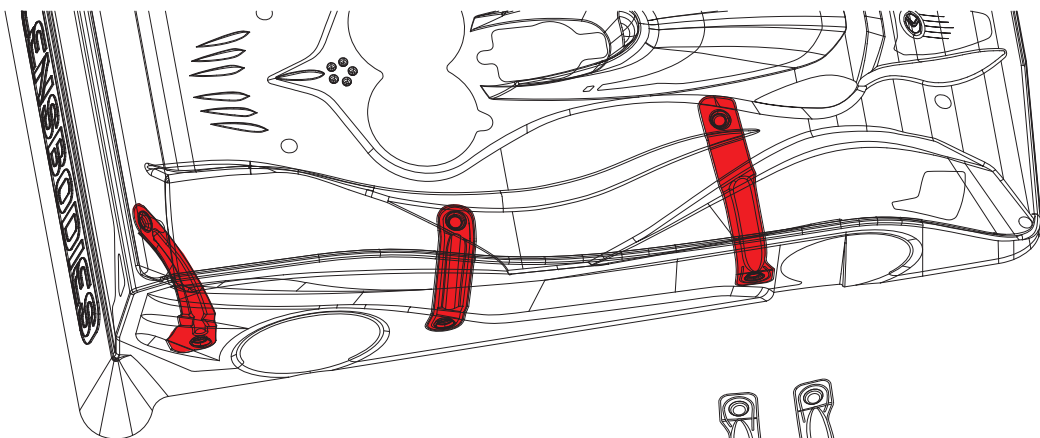


DX

SX




DX

SX

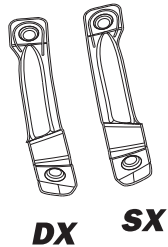


DX


SX

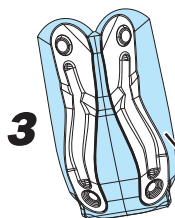

3

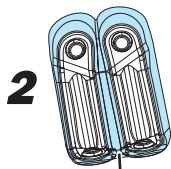

2

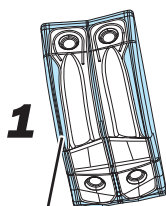

1

Cut around the lines

Installation of body stiffeners for BORA 1/8 onroad bodyshell

BORA

LENSBODIES